

## **SIDE COVER**

The right side cover must be removed for battery and fuse maintenance.


The left side cover must be removed for air cleaner maintenance

### Removal:

1. Remove the bolt (1).
2. Pull out the side cover (2).

### Installation:

- Installation can be done in the reverse order of removal.

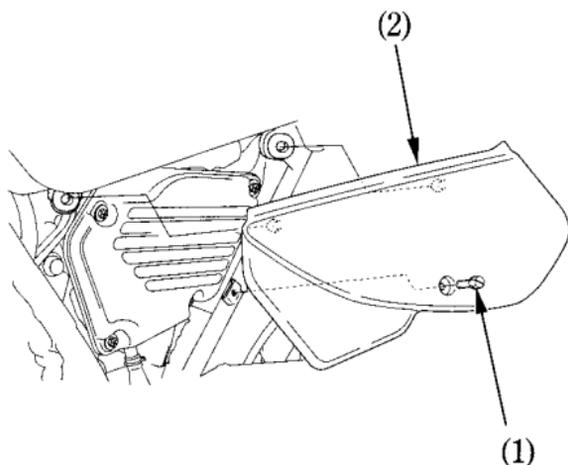

- (1) Bolt  
(2) Side cover