


TRANSMISSION OIL

Change the transmission oil when specified by the maintenance schedule.

NOTE:


- * Change the engine oil with the engine at normal operating temperature and the motorcycle on its center stand to assure complete and rapid draining.
1. Remove the oil filler cap (1) from the right crankcase cover.

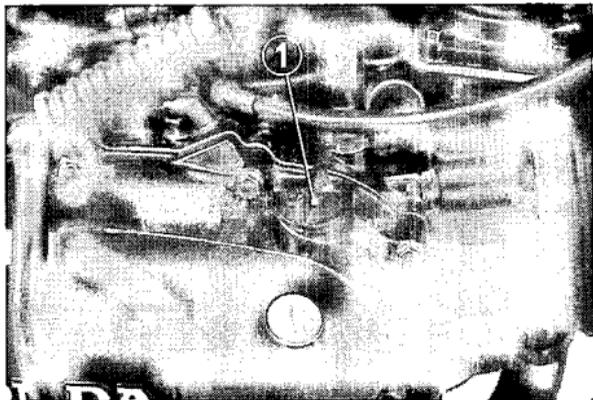

(1) Oil filler cap

2. Place an oil drain pan under the crankcase and remove the oil drain plug (2).
3. With the ignition switch OFF, operate the kickstarter several times to drain any oil which may be left in the engine.
4. After the oil has completely drained, make sure the sealing washer on the drain plug is in good condition.
5. Install the drain plug.

Drain plug torque: 25—35 N·m
(2.5—3.5 kg·m 18—25 ft·lb)

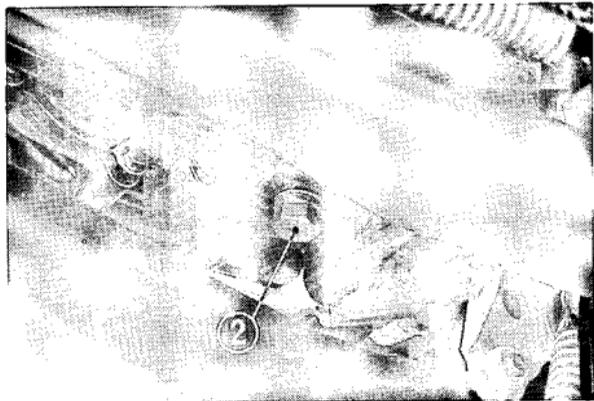

(2) Oil drain plug