


# Controls & Features

## Parking Brake

### LEFT HANDLEBAR

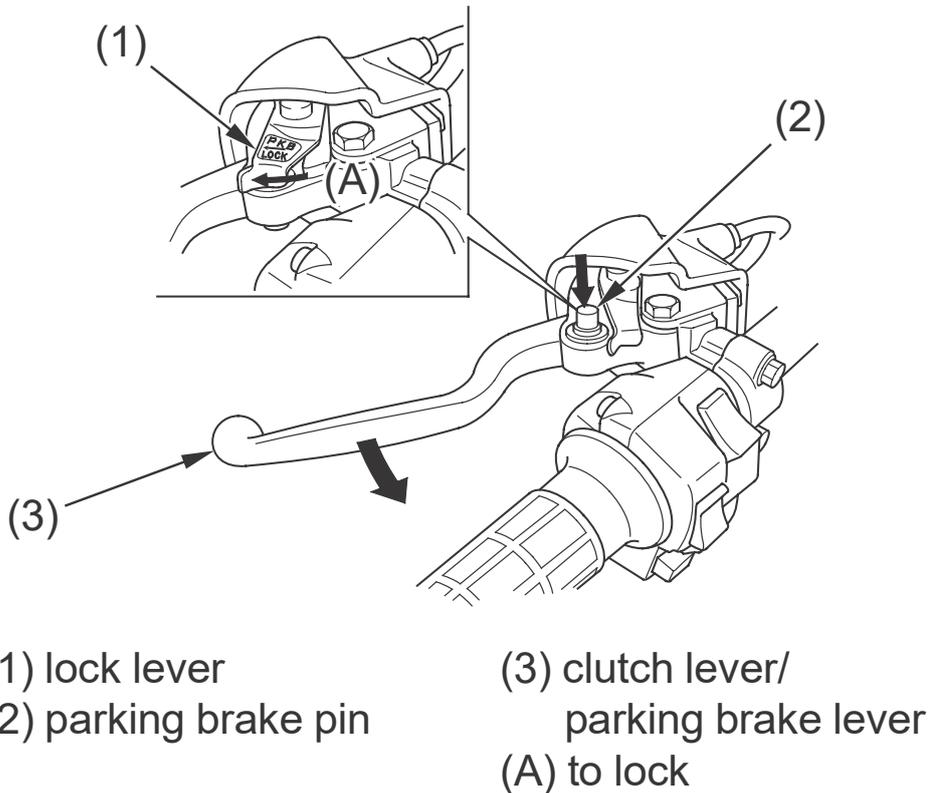

The lock lever (1) and parking brake pin (2) on the clutch lever/parking brake lever (3) allows it to be used as a parking brake. To operate, push down and hold the parking brake pin, squeeze the clutch lever/parking brake lever and then lock it with the lock lever. See *Parking* page 76 .

If you need to adjust the parking brake, see page 136 .