

4. Apply the brake several times and check for free wheel rotation after the brake lever is released.

NOTE:

- * If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion. Make sure the brake arm, spring and fasteners are in good condition.

Rear Brake

Pedal Height Adjustment:

A stopper bolt (1) is provided to allow adjustment of the pedal height. Loosen the lock nut (2), and turn the stopper bolt. Tighten the lock nut.

Brake Adjustment:

1. Place the motorcycle on its side stand.
2. Measure the distance the rear brake pedal moves before the brake starts to take hold.

Free play should be:

20–30 mm (3/4–1-1/4 in).

If adjustment is necessary, turn the rear brake adjusting nut (3).