


(1) 2P CONNECTOR  
(2) SOCKET BOLTS

### Fuel Tank/Fuel Pump

#### Removal


Remove the seat, front covers, side covers and the seat-rear fender assy.

Disconnect the injector 2P connector.  
Remove the injector holder socket bolts.

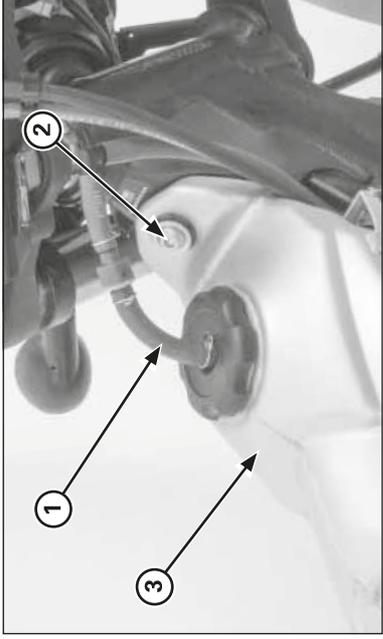

(1) BREATHER HOSE  
(2) BOLT  
(3) FUEL TANK

Disconnect the fuel tank breather hose.  
Remove the fuel tank mounting bolts.

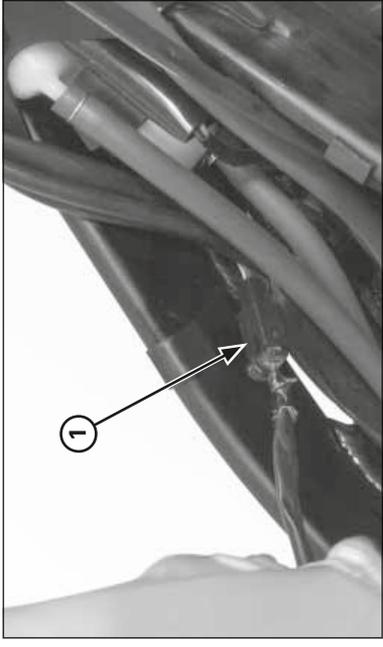

(1) 2P CONNECTOR

Pull up the fuel tank and disconnect the fuel pump 2P connector.

Remove the fuel tank and injector as an assembly being careful not to damage the injector especially tip of the injector.

After removing the fuel tank/injector assembly, protect tip of the injector.  
Also cover the cylinder head injector hole to prevent dust and dirt fall into the combustion chamber.