


REAR WHEEL/SUSPENSION/BRAKE

DISASSEMBLY


Remove the final driven flange mount bolts and lift the driven flange out of the hub.

FINAL DRIVEN FLANGE

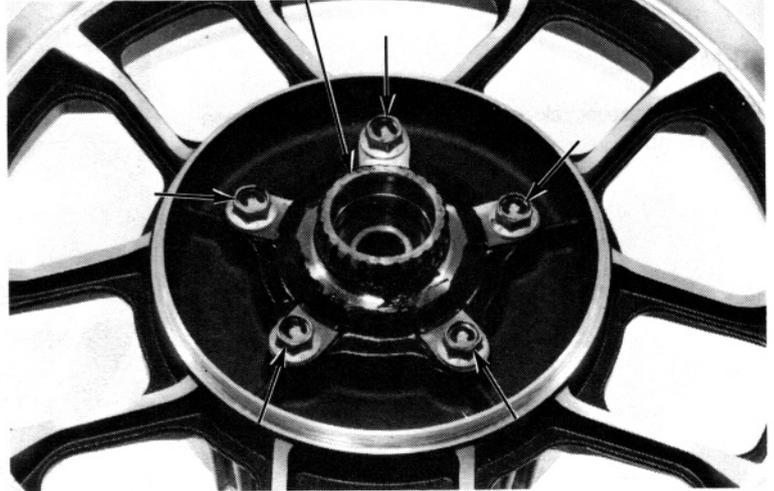

Remove the wheel bearings and distance collar with the special tool.

WHEEL BEARING REMOVER COLLET, 17 mm
07746-0050500

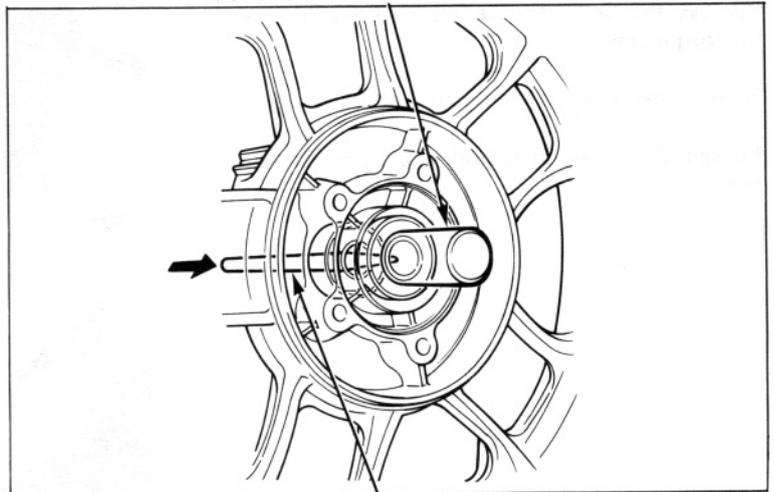

WHEEL BEARING REMOVER EXPANDER
07746-0050100
(COMMERCIALLY AVAILABLE IN U.S.A.)

INSPECTION

AXLE

Set the axle in V blocks and read the axle runout with a dial indicator. The actual axle runout is 1/2 of the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

