




CLUTCH/OIL PUMP

CAM FOLLOWER SHAFT DISASSEMBLY

Remove the snap ring, cam, return spring and cam-shaft.

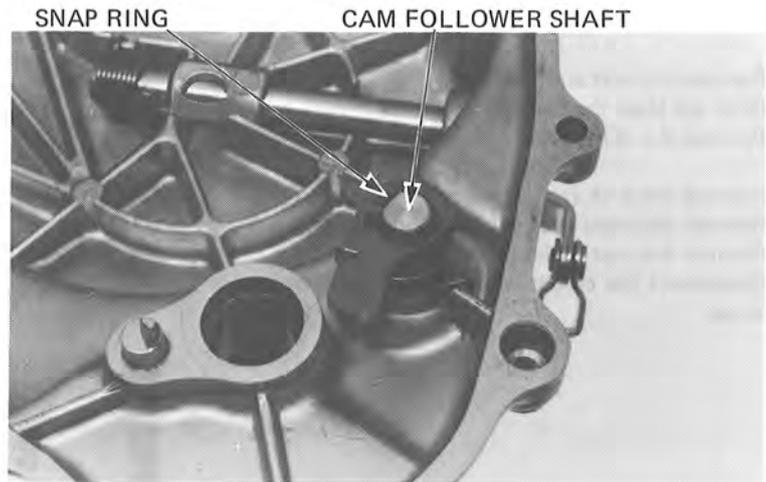

PULSE GENERATOR REPLACEMENT

Install the pulse generator wire in the crankcase cover cutout as shown.

