





Remove the dust seal.
Remove the circlip with snap-ring pliers, then remove the back-up plate.

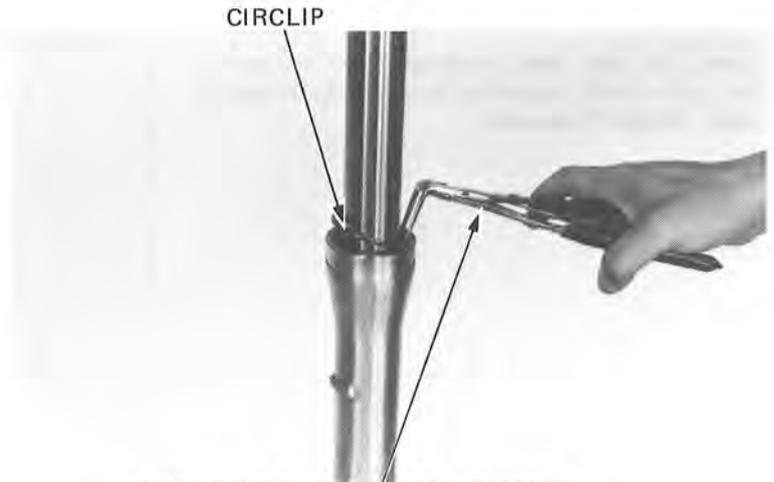

SNAP-RING PLIERS (07914-3230001)

In quick successive back and forth strokes, pull the fork tube out from the slider.
The slider bushing gives resistance and the fork tube bushing must force it out.
Remove the oil seal, back-up ring and slider bushing from the fork tube.

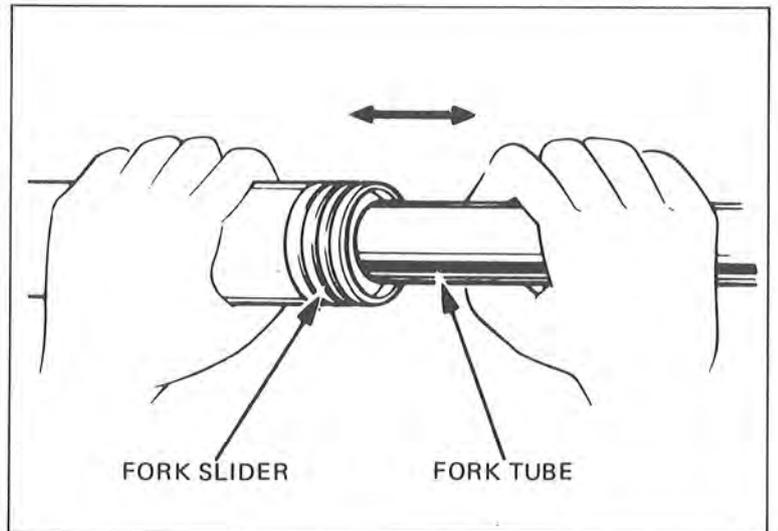

**INSPECTION
SPRING**

Measure the fork spring free length.

