



## CYLINDER HEAD/VALVES

Check each cam lobe for wear or damage.  
Measure the cam lobe height.

### SERVICE LIMITS:

INTAKE : 36.23 mm (1.426 in)

EXHAUST : 36.27 mm (1.428 in)



## CAMSHAFT BEARING INSPECTION

Check each camshaft bearing for wear or damage.  
Install the cylinder head cover.


**TORQUE: 10–14 N·m (1.0–1.4 kg·m, 7–10 ft·lb)**

Measure the camshaft bearing I.D.

### SERVICE LIMITS:

RIGHT: 24.07 mm (0.948 in)

LEFT: 20.07 mm (0.790 in)

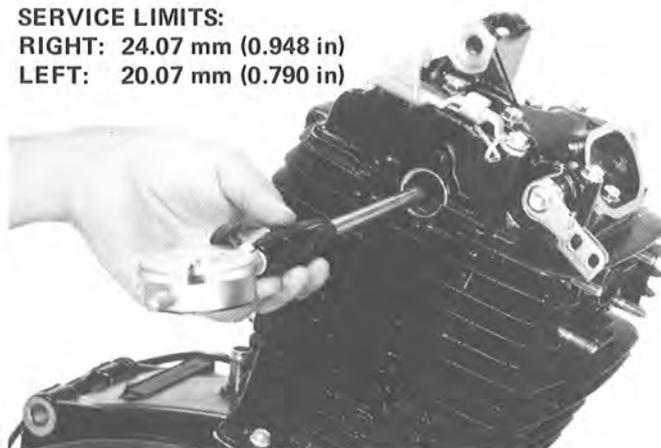

## REED VALVE INSPECTION

Check the reed valve for wear or damage.  
Check the operation of reed valve.

REED VALVE

